Komputador ho marka hp nia laiha butaun Reset.

Iha komputador marka hp nia laiha butaun Reset maibe iha konektor panel nian fatin Reset nian mamuk hela no laiha kabel, tuir mai ne'e, maneira halo butaun Reset no halo Reset komputador uza cave de fendas, no uza cable atu halo butaun Reset mak hanesan tuir mai ne'e:

Maneira halo butaun Reset Primeiro ita tenki iha butaun Reset no Chave de fendas, nia janela mak hanesan iha kraik ne'e:



No tuir mai ita loke uluk Casing nia matan, uza chave de fendas, nia janela mak hanesan iha kraik ne'e :




No tuir mai ita hasai konektor panel nian, no ita pasan fali cabel butaun Reset nian, no nia janela mak hanesan iha kraik ne'e :



Depois de pasan hotu Cabel Reset nian hotu



Tuir mai ita tu fila fali konektor panel nian ba iha panel no nia janela mak hanesan iha kraik ne'e :

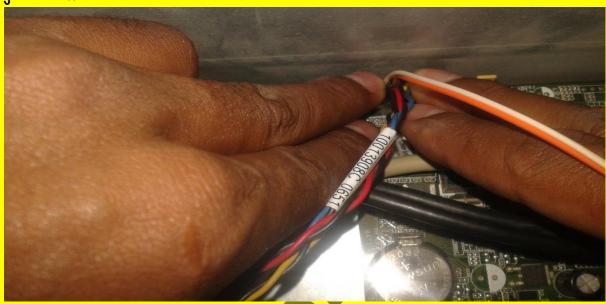

Tuir mai ita liga tia butaun Reset nian mai iha liur depois ita taka tia casign nia matan, no nia janela mak hanesan iha kraik ne'e:





Komputador sei moris no ita hakarak atu halo komputador Restar rasik uza butaun Reset, no nia janela mak hanesan iha kraik ne'e :



Depois mak ita hanehan butaun Reset no komputador sei Restar rasik, nia janela mak hanesan iha kraik ne'e :



Maneira uza cave de fendas hodi Reset komputador mak hanesan tuir mai ne'e:

Ita prepara uluk chave de fendas, nia janela mak hanesan iha kraik ne'e :



Tuir mai ita loke uluk casing nia matan, no nia janela mak hanesan tuir mai ne'e:



Depois ita hasai tia konektor panel nian, nia janela mak hanesan iha kraik ne'e :



Hafoin mai ita uza cave de fendas hodi halo Pin Reset nian rua Kona malu no komputador sei otomatikamente Restar rasik no nia janela mak hanesan iha kraik ne'e:






Maneira halo butaun Reset uza cabel.
Ita tenki prepara cabel no cave de fendas, nia janela mak hanesan iha kraik ne'e:



Tuir ita hanesan bainbain ita loke uluk casing nia matan, nia janela mak hanesan iha kraik ne'e:



Tuir mai iha hasai tia konektor panel nian, depois mak ita pasa cabel ne'e ita prepara ona, nia janela mak hanesan tuir mai ne'e:

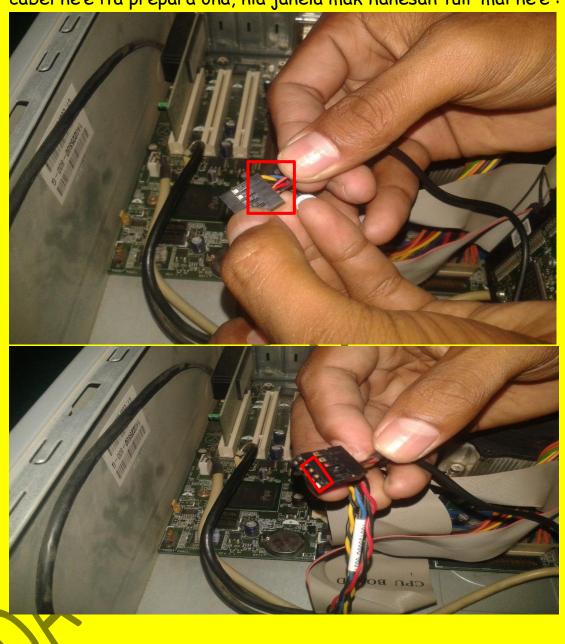

Depois tuir mai ita pasan fila fali konektor panel nian ba iha nia fatin no nia janela mak hanesan iha kraik ne'e :



Depois de pasan hotu ita liga tia cabel ba liur hafoin ita taka tia casing nia matan no nia janela mak hanesan iha kraik ne'e:



Depois mak ita atu Reset ita presisa halo cabel rua kona malu, no komputador sei Restar rasik nia janela mak hanesan iha kraik ne'e:



Depois de halo cabel rua nia tutun kona malu mak komputador sei Restar rasik, nia janela mak hanesan tuir mai ne'e :



Obrigadu/a